

KX7 Replacement Parts



KX7 concaves bring value to all aspects of their use, including the service side. Replace individual components rather than an entire concave, or use KX7's customizable design to swap box inserts for a unique configuration that works best for you. Only KX7 allows you to *Take Control of Your Harvest!*

KX7ag.com


John Deere Models: S550/S650, S660, S670, S680, S690, S760, S770, S780, S790, 9650 STS, 9660 STS, 9670 STS, 9750 STS, 9760 STS, 9770 STS, 9860 STS, 9870 STS, S7 600, S7 700, S7 800, S7 900

BA2-001



KX7 Empty Frame

BA2-004

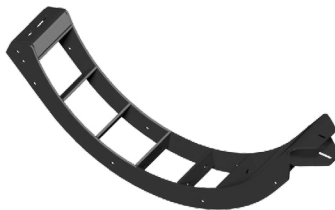

KX7 Extreme Wear Empty Frame

BA2-L02



KX7 Front Ramp

BA2-R05



KX7 MaxRound™
Concave Assembly

BA2-R09



KX7 MaxRound Extreme Wear
Concave Assembly

BA2-X05



KX7 MaxThresh™
Concave Assembly

BA2-X06



KX7 MaxThresh Small Hole
Concave Assembly

BB2-X09



KX7 MaxThresh Extreme Wear
Concave Assembly

BB6-M01



KX7 MaxBlock Box Insert

Contact Your Dealer to Order | Questions for Kondex? Contact Us: KX7@kondex.com or 800.447.1860

KX7 Replacement Parts



KX7 concaves bring value to all aspects of their use, including the service side. Replace individual components rather than an entire concave, or use KX7's customizable design to swap box inserts for a unique configuration that works best for you. Only KX7 allows you to *Take Control of Your Harvest!*

KX7ag.com

John Deere Models: S550/S650, S660, S670, S680, S690, S760, S770, S780, S790, 9650 STS, 9660 STS, 9670 STS, 9750 STS, 9760 STS, 9770 STS, 9860 STS, 9870 STS, S7 600, S7 700, S7 800, S7 900

BB6-R05



KX7 MaxRound Box Insert

BB6-R06



KX7 MaxFlow Box Insert

BB6-S05



KX7 MaxGrate Box Insert

BB6-X04



KX7 MaxThresh Box Insert

BB6-X06



KX7 MaxThresh Small Hole Box Insert

BB6-X07



KX7 MaxClosed Box Insert

BB6-X09



KX7 MaxThresh Extreme Wear Box Insert

904-695



KX7 Wedge Lock

Contact Your Dealer to Order | Questions for Kondex? Contact Us: KX7@kondex.com or 800.447.1860